

LASER SMART ROBOT VACUUM

Instruction Manual

Please keep this user manual in your sight
read it thoroughly and carefully before using this product.

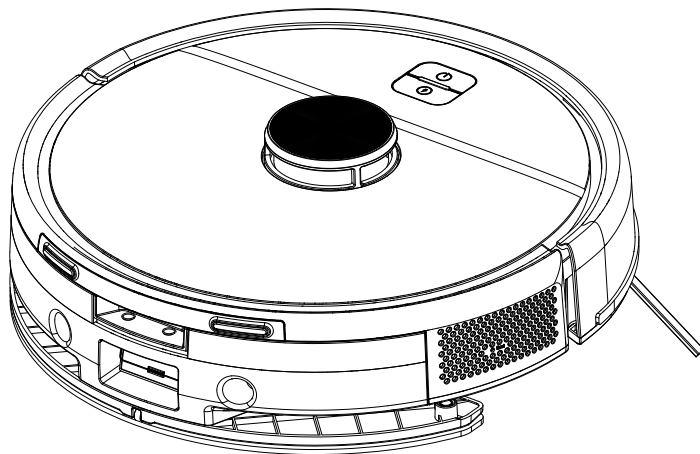 


Table of Contents

1. Important Safety Instructions

- 1.1 Safety Advice and Warnings.....01
- 1.2 Battery and Charging/Information.....03

2. About Your Robot

- 2.1 Package Contents.....04
- 2.2 Main Body.....05
- 2.3 2-in-1 Water tank.....07
- 2.4 Charging Base.....08

3. Using Your Robot

- 3.1 Important Tips Before Use.....09
- 3.2 Preparation10
- 3.3 Charge Your Robot.....11

4. Connecting Your Robot

- 4.1 Use Your Robot with Smart Life12
- 4.2 Use Your Robot with Amazon Alexa14
- 4.3 Use Your Robot with Google Assistant15

5. Common Functions & Operations

- 5.1 Power On/Off.....16

- 5.2 Start/Stop Cleaning.....16
- 5.3 Recharging.....16
- 5.4 Clean Mode.....17
- 5.5 The Other Functions.....18

6. Regular Robot Care

- 6.1 Emptying Robot's Dust Bin.....19
- 6.2 Cleaning Robot 's Filter20
- 6.3 Cleaning Robot's Common Accessories.....21
- 6.4 Clean the Sensors and Charging Pins.....22
- 6.5 Battery Maintenance.....22
- 6.6 Battery Replacement.....23
- 6.7 Cleaning the 2-in-1 Water Tank.....23

7. Troubleshooting

- 7.1 Error Tones25
- 7.2 Frequently Asked Questions.....26
- 7.3 Wi-Fi Connection.....28

8. Specifications.....29

9. FCC Statement.....30

10. Voice prompts and solutions.....31

1. Important Safety Instructions

Robot Vacuum Cleaner

Dear customer:

We are deeply honored that you chose our products and would like to thank you for your purchase. Our products includes the latest technology in the market, allowing our products to offer you Efficiency, Easy Operation and Long Lasting Service when you use it. Also we made sure the design of our products is cool and the maintenance easy to make your life way simpler. Read these instructions carefully before using our robot vacuum cleaner and keep this manual for further reference. Failure to follow these instructions could lead to product failure or harm.

1.1 Safety Advice and Warnings

This device is not intended for use by people (including children) with reduced physical, sensory or mental capacities, or people with out experience or knowledge, unless they have benefited from surveillance or prior instructions regarding the use of the device by a person responsible for their safety.

- Cleaning and maintenance shall not be performed by children without adult supervision.
- This appliance is not a toy. Children should be supervised to ensure that they do not play with the appliance.
- This appliance contains accessories with rotary parts. Loose clothes, jewellery or long hair can be caught in moving parts. Dress properly. Do not wear baggy or loosehanging clothes or accessories. Keep your hair, clothing and gloves away from moving parts.
- This product is designed to be plugged into a standard outlet only. Product may not be used with any type of power converter. Use of power converters will immediately void the warranty.
- **CAUTION:** Only use Max 16.6V/Max 2600mAh Li-ion Battery. Other type of batteries might cause bursting and therefore injuries. Always contact Smart Life Customer Service to receive the best advice and the best service event for the replacement of your battery.
- Always charge and remove the battery from your robot and accessories before long-term storage or transportation.
- The battery must be removed from this device before this device is disposed.

- **WARNING Chemical Exposure:** If the battery pack is leaking, do not let the liquid to come in contact with skin or eyes. If the liquid reached the skin or the eyes, wash the affected area with loads of water and contact your medical adviser. Place the battery (the used battery pack included when the robot will be disposed) in a sealed plastic bag and dispose of safely according to local environmental regulation.
- **WARNING Fire or Explosion Hazard:** Do not crush or dismantle battery packs. Do not heat or place the battery pack near any heat source or direct sunlight. Do not incinerate or short-circuit the battery pack. Do not subject batteries to mechanical shock.
- Contact your local waste management authority for battery recycling and disposal regulations in your area.
- This device is designed for indoor use only, please do not use it outdoor or under strong light environment.
- Do not use non-rechargeable batteries. Use only the rechargeable battery supplied with the product.
- Store and operate the device in room temperature environments only.
- The external flexible cable or cord of the power supply unit cannot be replaced; if the cord is damaged, the power supply unit shall be disposed of.
- Do not use robot to pick up sharp objects, glass, or anything that is burning or smoking.
- Do not immerse the battery pack in any liquid.
- Do not use this device to pick up spills of water, bleach, paint, or other chemicals, or anything wet. Do not place anything on top of this device.
- Before using our robot vacuum cleaner, make sure that the floor is cleared of objects like clothes, papers, curtain strings or power lines. If such objects come in contact with the vacuum cleaner, the central may swallow it and block the robot.
- If the room to be cleaned contains a balcony, a physical barrier should be used to prevent access to the balcony and ensure safe operation.
- Be aware that this device moves around on its own. Take care when walking in the area where this device is operating to avoid stepping on it.
- Do not operate this device in areas with exposed electrical outlets on the floor.
- Do not use this device on an unfinished, unsealed, waxed or rough floor. It may result in damage to the floor and this device. Use only on hard floor surfaces or low-pile carpet.
- This device has been designed to be used on floors without scratching them. We still recommend that you test this device on a small area of the room to be cleaned to ensure no scratches are made before cleaning the whole room.

1.2 Battery and Charging/Information

Lithium-ion Battery

Important: Lithium-ion batteries and products that contain Lithium-ion are subject to stringent transportation regulations. If you need to ship this product with the battery included for service, travel or any other reason, you must comply with the following shipping instructions:

- Remove the Lithium-ion battery from the product.
- Place a Piece of tape over the battery metal charging contacts.
- Reinstall the battery (with the tape on it) in the product and secure the battery door.
- Package the product in its original packaging or in your own packaging that prevents any movement during transportation.
- Ship via ground transportation only (no air shipping).

Battery Storage

 
If storing robot off the Charging Base, remove the battery first. Then store the robot and the battery in a cool, dry place.




The symbol on this product or its packaging indicates that this device cannot be disposed as unsorted municipal waste. To dispose of such device, you need to use separate collection facilities. Contact your local authority for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps hazardous substances can leak into the ground water and get into the food Chain, damaging your health and well-being. Please contact your local or regional waste authority for more information on collection, reuse and recycling programs.

2. About Your Robot


2.1 Package Contents

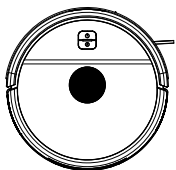


Main Body *1

 


Charging Base *1

 


Adapter *1

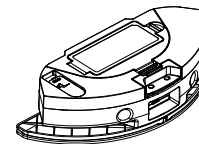 

2-in-1 Water Tank *1

 


Mop Cloth *1

 

Mop Board *1



 
Side Brush *1




Filter *1



 Cleaning Knife *1




User Manual

 

Roller Brush

 2.2 Main Body

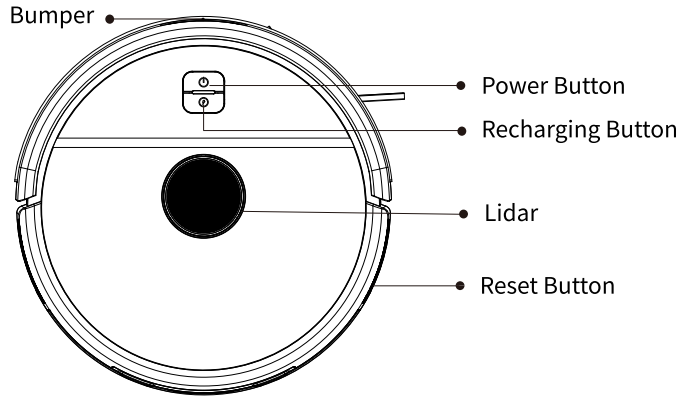

⏻ On and Off/Auto cleaning


- Short press to start auto cleaning/pause.
- Press and hold for 3 second to turn on or off the robot.

🔋 Recharge



- Short press to start the recharge.

LED Indicators

Status	Indicator Light
Sleeping	Light is off
Standby	Solid blue light
Working	Solid blue light
Recharge	Solid orange light
Charging	Breathing orange light
Fully charged	Solid blue light
Error	Solid red light

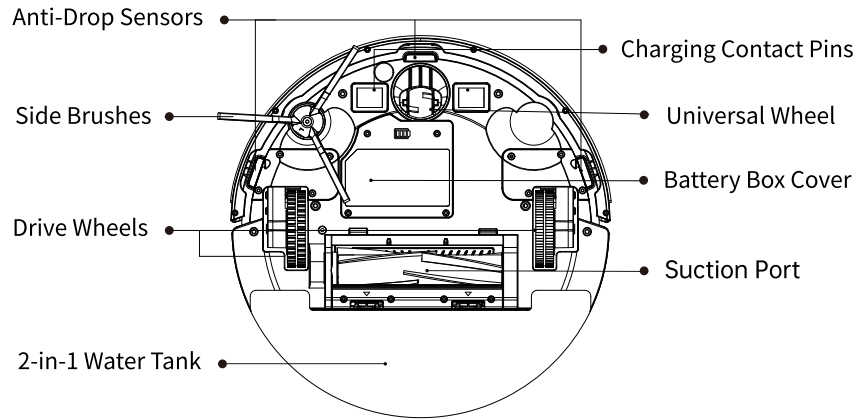 

  
2.3 2-in-1 Water tank

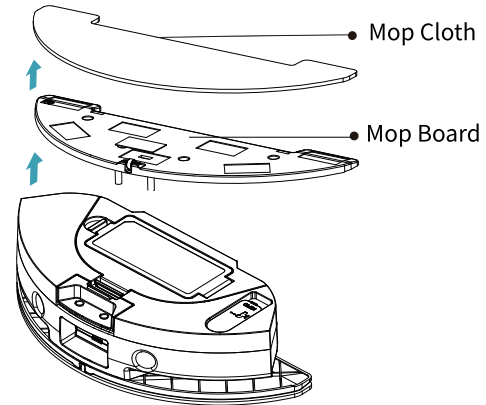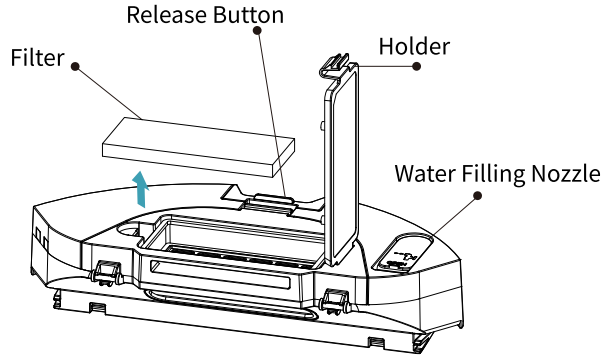

Note:


- Please check the accessories according to your product version.
If you need buy other accessories and consumable supplies, please purchase in the official store.
- Do not add cleaning products such as detergents, disinfectants, solid detergents, etc.
- Do not inject hot water to avoid corrosion and damage to the water tank. After mopping is finished, please take out the mop stand in time, pour out the remaining water in the 2-in-1 water tank in time, and wash and dry the mop to avoid odor and mildew.

 2.4 Charging Base

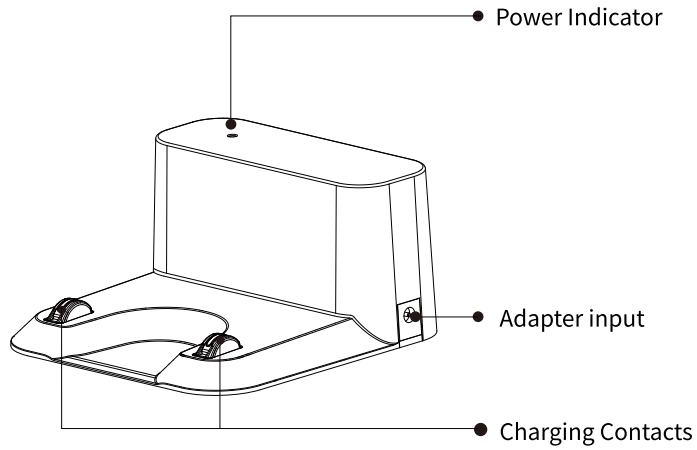


3. Using Your Robot

 
3.1 Important Tips Before Use

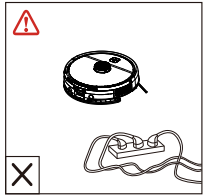


1

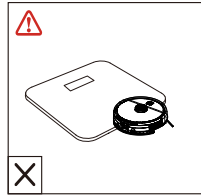 


2

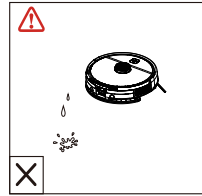 


3

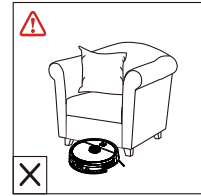 

4

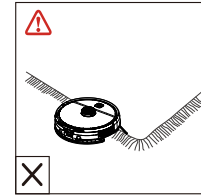 

5

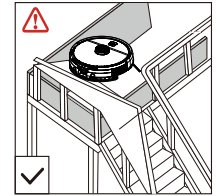 

6

- 1 Remove every objects that might entangle the Robot such as curtains stings, power cords, nails etc...
- 2 Robot may climb on top of objects less than 0.6 inch/ 15mm in height. Remove these objects if possible.
- 3 Keep Robot away from wet areas.
- 4 Keep Robot away from spaces lower than 2.89 inch/73.5mm to prevent Robot from getting stuck. If necessary, place a physical barrier to block off the problem areas.
- 5 Fold tasseled edges of area rugs underneath to prevent tangling Robot. Avoid cleaning very dark-colored high-pile rugs or rugs thicker than 1.02 inch/26mm as they may cause Robot to malfunction.
- 6 Anti-drop sensors prevent Robot from tumbling down stairs and steep drops. They may work less effectively if dirty or used on reflective very dark-colored floors. It is recommended to place physical barriers to block off areas where Robot may fall.



 
Place physical barriers in from of areas that might damage the Robot such as freplaces, heaters, pools etc...

3.2 Preparation


1. Plug in the Charging Base, and organize the remaining wires so that they can not be touched while the Robot is working.

Note: If you do not tuck away the excess wires, they may snag the robot while charging or cleaning

2. Charging Base Position Place the Charging Base on a hard, level surface and against a wall.
3. Charging Base Position Place the Charging Base on a hard, level surface and against a wall.

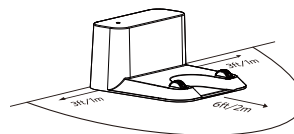

 
4. Connect the round connector of the adapter into the power socket on the Charging Base and the other end into a wall outlet.

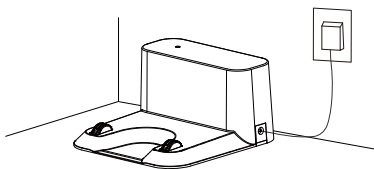



-Install the Charging Base in a location that Robot can easily access. It is recommended to place the Charging Base against a wall, and on a hard level surface rather than on rugs or carpets.

-Always keep the Charging Base plugged in, otherwise Robot won't be able to automatically find its way back to the Charging Base.

  5. Please install the side brush and lock the screw before use. Remove the foam block next to the bumper.


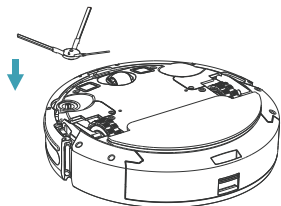


 6. Press the power  button for 3 seconds to turn on the robot.

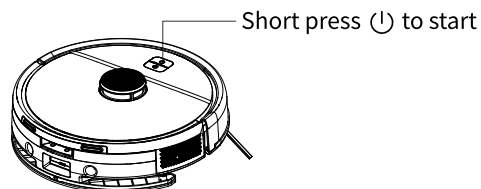

3.3 Charge Your Robot

  - Robot has a pre-installed rechargeable battery that has to be fully charged before use.
- Robot returns to the Charging Base at the end of a cleaning cycle or when its battery is running low.
- Method: Connect the robot to the Charging Base by matching the charging pins on the robot with the charging pins of the base.

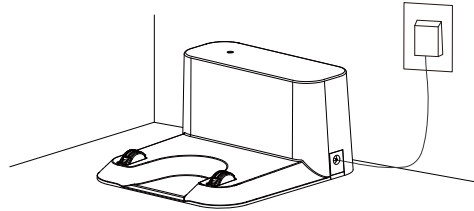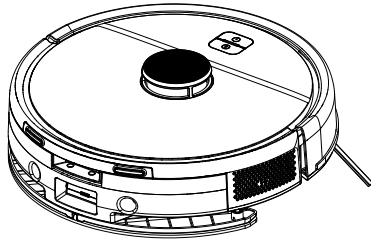

- Turn off the main power switch if the robot is not intended to be used for a long time.
- To ensure a longer battery lifespan, charge it at least once every 6 months.

4. Connecting Your Robot

 
4.1 Use Your Robot with Smart Life

1. Download "Smart Life" App


To enjoy all available features, it is recommended to control your robot via the "Smart Life" App.

Before you start, make sure that:

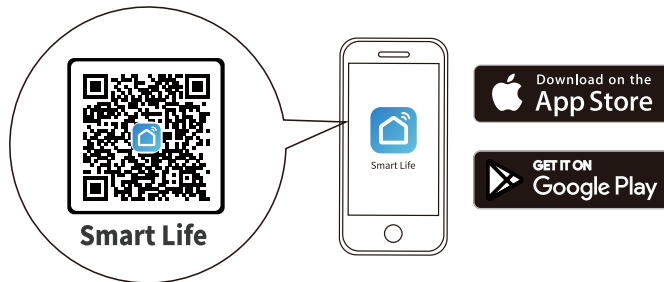

 - Your smartphone or tablet is connected to a Wi-Fi network.
- Your smartphone or tablet is running with iOS 12.0 (or above) or Android 6.0 (or above).
- The 2.4 GHz band wireless signal (NOT 5GHz) is enabled on your wireless router. The Wi-Fi status light on robot is flashing blue.
- The robot is connected to the Charging Base to ensure it has enough power during setup.

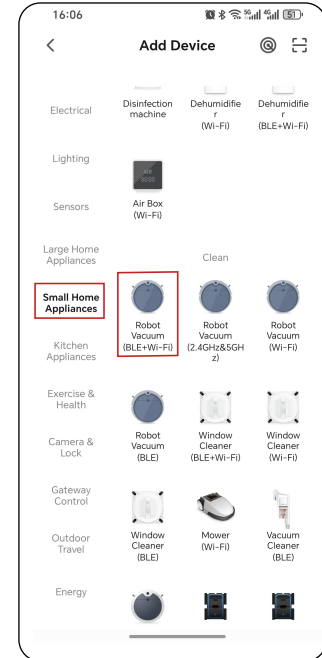


2. Log in on APP and click "Add device". Choose "Home Appliances" and "Robot Vacuum Cleaner (Bluetooth + WI-FI)" in sequence.




3. Configure the network.

 Put the body on the Charging Base, press  and  hold it for 3s to enter the network configuration mode.

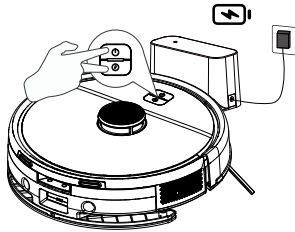


5. Connect the device hotspot.

 Enter "Set" and "WLAN List" in sequence on the mobile phone and choose "Smart Life-xxxx". After successful hotspot connection, return to the APP.

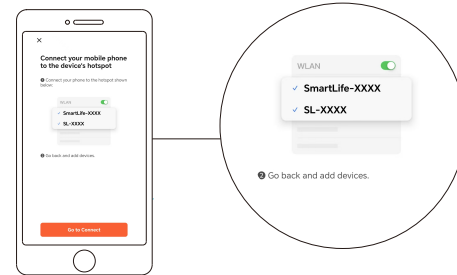


 4. Enter the WiFi password.

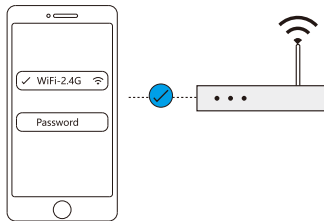

6. Do network configuration.

 The APP will enter the device connection status and wait for network configuration.

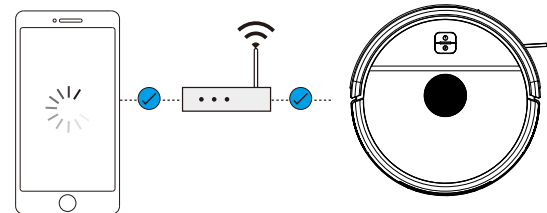

Note: The body now does not support a 5G WiFi network.

4.2 Use Your Robot with Amazon Alexa

 
Amazon Alexa or the Google Assistant is a smart voice control device that enables you to control robot with your voice.

Before you start, make sure that:

- The robot is connected to the Charging Base to ensure there is enough power.
- The robot is connected with the **Smart Life** App.
- You have an Alexa-enabled device (i.e. Amazon Echo, Echo Dot and Amazon Tap, Echo Show, Echo Spot) .These devices are sold separately.
- The Amazon Alexa App is already installed on your smart device, and you have created an account.

To control Robot with Amazon Alexa

- Open the Amazon Alexa app and select "Skills & Game" from the ☰ menu.
- On the **Skills** screen, search for "Smart Life HOME".
- Once you have found the "Smart Life HOME" skill, tap **Enable**.
- Login with your **Smart Life** account so that Alexa can control your robot.
- Say simple commands to Alexa.

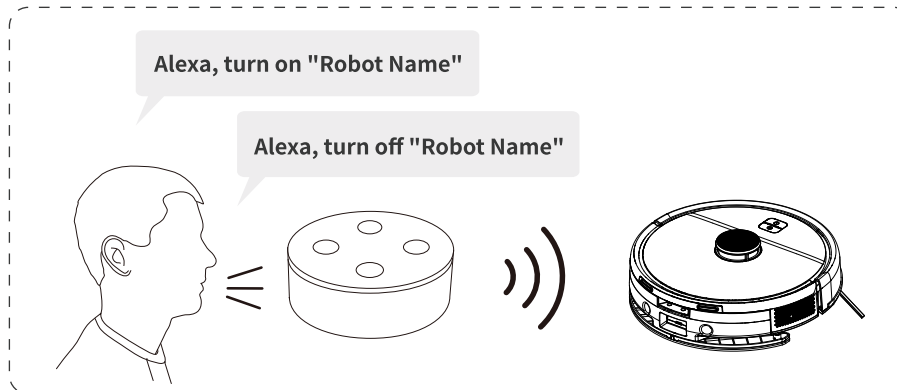

4.3 Use Your Robot with Google Assistant

Amazon Alexa or the Google Assistant is a smart voice control device that enables you to control robot with your voice.

 
Before you start, make sure that:

- The robot is connected to the Charging Base to ensure there is enough power.
- The robot is connected with the Smart Life App.
- You have a device enabled with the Google Assistant (i.e. Google Home. Google Home Mini). These devices are sold separately.
- The Google Home App is already installed on your smart device, and you have created an account.

To control the robot with the Google Assistant



The robot now works with the Google Assistant on devices like the Google Home.

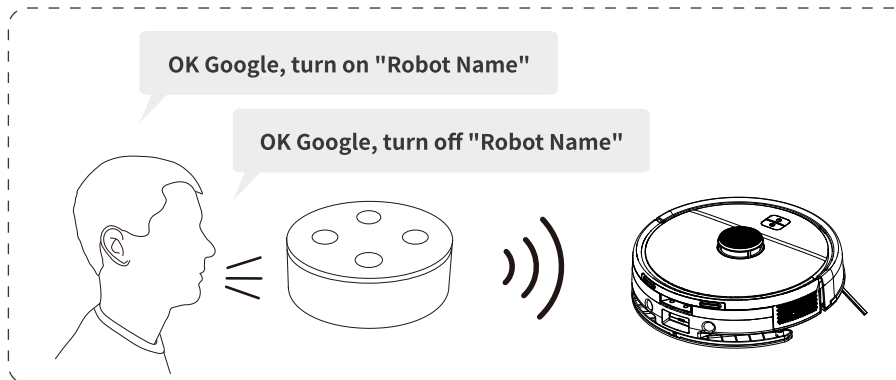- Open the **Google Home** App.
- Say "Ok Google, talk to Robot" to the Google Assistant-enabled device to initiate the Google action for Robot.
- Follow the instructions in the Google Home app to authorize the Google Assistant with your Smart Life App account.
- To control Robot with your voice, say simple commands to Google Assistant.

 


5.Common Functions & Operations



5.1 Power On/ Off

- **Power on:** When the Robot is shut down, Long press  3S, and the light is solid on blue.
- **Power off:** When the Robot is power on, Long press  3S, and the light is off.

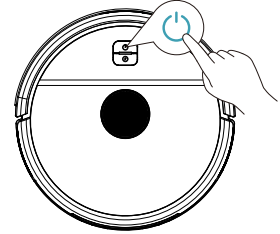▲ **The product cannot be powered off in charge**



5.2 Start/ Stop Cleaning


- **Start Cleaning:** When the Robot is standby or charging, press button , the robot will global cleaning.
- **Stop Cleaning:** When the Robot is cleaning, press button , the robot will stop cleaning.

If its battery gets low before finishing a cleaning cycle,the robot will return to the Charging Base to recharge.

 
If the Charging Base is inaccessible, the robot will not be able to return to the Charging Base and therefore will not be able to charge.

It will return to its starting location and the cleaning cycle will end, please place the robot manually on Charging Base for charging.

5.3 Start Recharging

When the robot is runing, press button ,the robot will return to Charging Base to charge.

▲ **Notice: Please use the Robot after fully charging the Robot.**

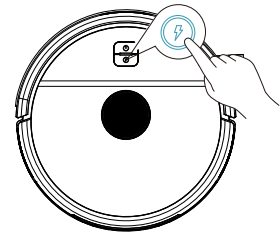

5.4 Clean Mode

Through the APP operation, the robot supports the following several cleaning modes:

Smart Cleaning

- At the start of a cleaning cycle, the robot will map out your home and cleaning it efficiently.
- At various times throughout the cleaning cycle, the robot will bump around the edges of the rooms as well as chair legs and other furniture.
- Once the robot finishes its cleaning cycle, it returns to the Charging Base to recharge.

Select Room

 
- When the Robot is standby or paused, it allows you to draw one or multiple rectangular boxes on the virtual map in the app. The robot will then only clean within the confines of these user-defined zones, making it perfect for cleaning a specific area like under the dining table.
- After cleaning, the main body will return to its original position and stop cleaning.

Zone Cleaning

- You can then select individual rooms (e.g., "Kitchen," "Living Room") from the app. The robot will efficiently clean only the selected rooms in the order you choose, often allowing you to set the number of cleaning passes per room.

Where To Sweep


- This is an interactive feature where you simply tap any point on the map in the app.
- The robot will then navigate directly to that precise location and clean a small circular area around it (usually 1-2 meter radius). It's ideal for tackling small, immediate messes like spilled cereal.

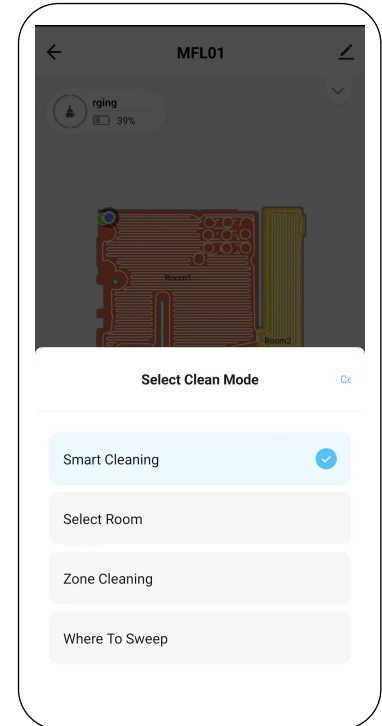

5.5 The Other Functions

The APP supports the following functional operations:

Function	Function Description	Applicable Scenarios
Timer	Schedules the robot to automatically start working at specific times in the future.	Automatic cleaning after leaving for work on weekdays, returning to a clean home.
DND Mode	Mutes sounds and disables notifications during set periods to avoid disturbing users.	Activated during night time, naps, or while working from home.
Resume Cleaning	Automatically returns to the point where cleaning was interrupted and continues after recharging.	Automatically resuming cleaning after recharging during mid-clean power loss in large homes.
Voice Control	Customizes the language and volume of prompt sounds.	Lowering volume at night; switching to fun voices for children.
SeekRobot	Uses the app to make the robot emit sounds and light signals for easy localization.	When the robot is stuck under a bed or furniture and cannot be found.
Map Management	Edits generated maps, sets restricted areas, and divides rooms.	Setting the kitchen as a no-mop zone; specifying cleaning order.
Supplies Management	Monitors the lifespan of consumables like side brushes and filters and reminds users to replace them in time.	The app alerts when the main brush lifespan is nearly exhausted, prompting timely replacement.
Factory Reset	Clears all user settings and data, restoring the machine to its initial factory state, including suction levels, water volume settings, presets, history, consumable data, network, etc.	When unresolved issues occur during use.

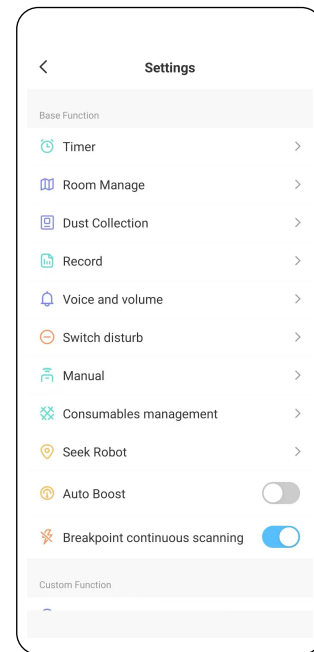 

The Dust Collection function is only available after purchasing the Auto Empty Base.

6. Regular Robot Care


To ensure that the robot will run at full performance, perform the following care procedures. If you notice robot picking up less debris from your floor, then empty the Dust Bin. clean the Filter and Side Brush.

Recommended cleaning/replacement frequency:


Position	Cleaning	Replacement Frequency
Dust Bin	After each use	—
Filters	Once every week	Every 2 months
Side Brushes	Once every month	Every 3-6 months(or when visibly worn)
Sensors	Once every month	—
Charging Pins	Once every month	—
Universal Wheel	Once every month	

6.1 Emptying Robot's Dust Bin

 1 Press bin release button to remove the Dust Bin.

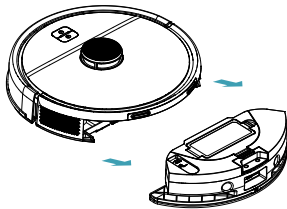


2 Open bin's door to empty it.

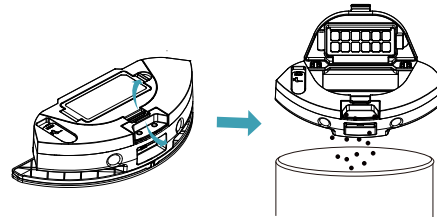 


6.2 Cleaning Robot 's Filter

 
1 Take off the filter holder and remove Dust Bin filter.

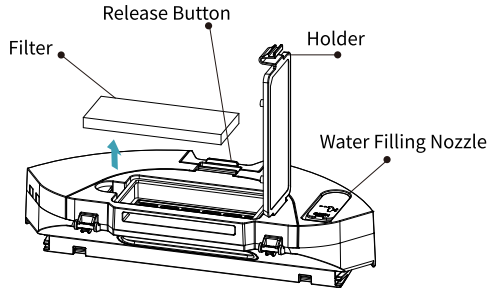

 
2 Shake off debris by tapping the filter against your trash container.

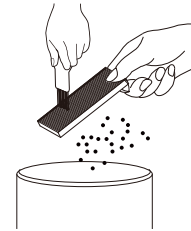

 3 Flush the Dust Bin and Clean the Filter.

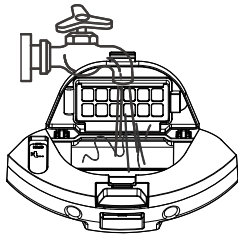

 
4 Dry the filter and Dust Bin before reinstalling.

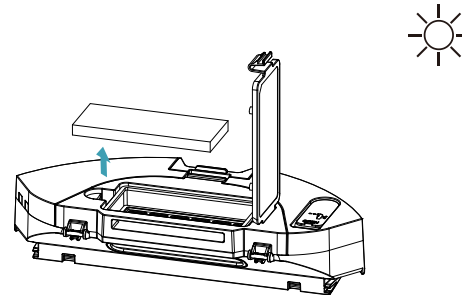

6.3 Cleaning Robot's Common Accessories


1 Clean the cliff sensor

 Use a cloth or cleaning brush to remove dust from the cliff sensor.

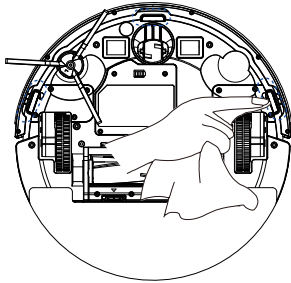


2 Clean the Side Brushes

 Remove the Side Brushes. Wipe the Side Brushes and their slots with a dry cloth.

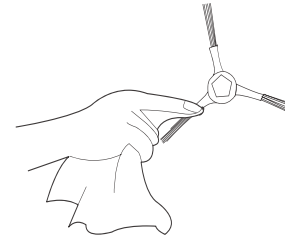


3 Clean the universal wheel

 Use the multi-function cleaning tool to cut off and remove any hair tangled around the universal wheel.

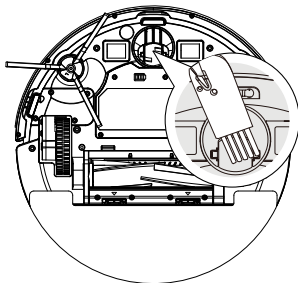



4 Clean the driving wheel

 Clean the driving wheel to maintain its effectiveness.

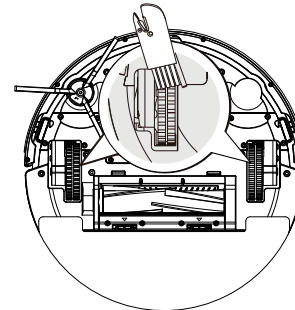

6.4 Clean the Charging Pins

 
 
- Dust off the charging contact pins using a cloth or cleaning brush.

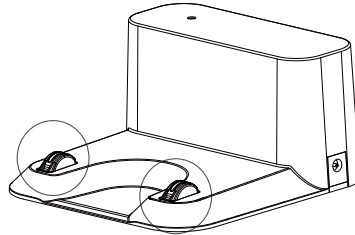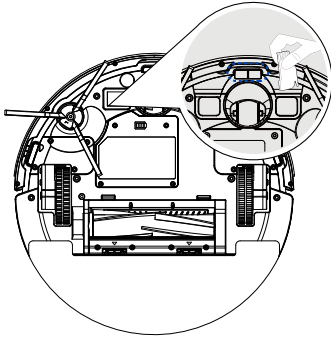


6.5 Battery Maintenance

- The robot has inserted high-performance lithium battery packs and to maintain the battery's performance, please keep it charged at a daily basis.
- If placing the robot into storage, charge it fully and turn it off before placing it in a cool dry place. Recharge it at least every three months to prevent the battery over discharging.

  6.6 Battery Replacement

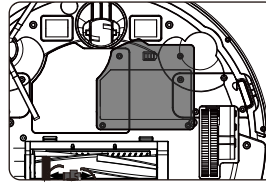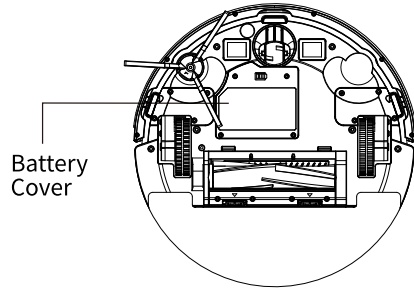

 
Use a Phillips screwdriver to remove the screws and open the battery cover.

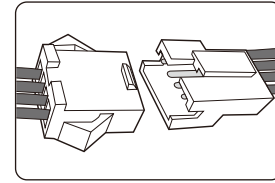


Unhook the battery connector, replace the battery, and reattach the battery cover in the same way.

6.7 Cleaning the 2-in-1 Water Tank

 
1 Press and hold 2-in-1 release button, and pull out the 2-in-1 water tank at the same time.

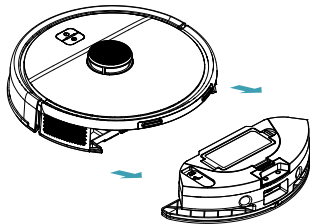

 2 Pull the buckle of 2-in-1 water tank and dust box, and pour the waste.

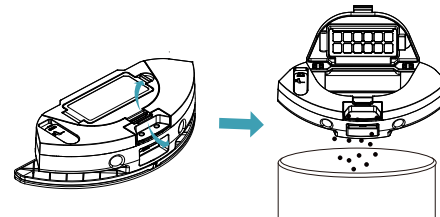

 3 Remove the Filter and use a cleaning brush to remove any foreign matter from the filter.

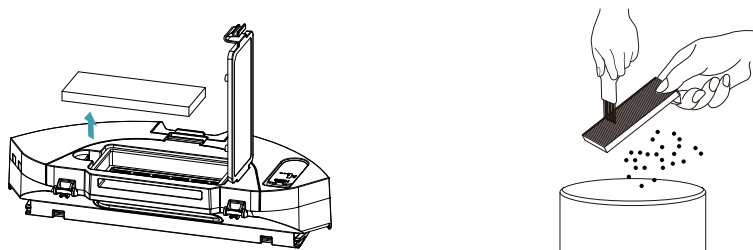

4 Take off the mount by press the latch. Put it in place according to the original direction after cleaning or replace mop



Prompt:

1. Please clean the mop in time, for the mopping effects will be weakened if mop has much dirt.
2. Remove the mop for cleaning and installation. It is forbidden to clean it on the 2-in-1 water tank; otherwise, the water can be damaged easily.
3. It is advised to replace the mop once every 3-6 months, in order to ensure good cleaning effects.

Note:

It is necessary to take off the cloth for cleaning.
It is prohibited to clean the cloth on the mount.

7. Troubleshooting

7.1 Error Tones

Voice Prompts	Solutions
Please check if the bumper is stuck.	The front bumper is stuck. Please tap repeatedly to remove any dirt. After confirmation, please relocate it to start.
The side brush is blocked	The side brush may be entangled with trapped dirt. Please clean and retry.
The main brush is blocked	The main brush may be entangled with trapped dirt. Please clean the roller brush and retry.
The left/ right wheel is blocked	The wheel may be entangled with trapped dirt. Please clean the wheel and retry.
The robot has been lifted off the ground and the current work has stopped	The robot may be picked up or suspended, please move it to a new position close to the original position and retry.
The left/ right wheel lifted off the ground	The robot may be picked up or suspended, please move it to a new position close to the original position and retry.
Please check if the cliff sensor is blocked.	The robot is suspended in the air or the cliff sensor may be stuck with dirt or blocked. Please wipe the cliff sensor with a dry cloth and then move it to a nearby place to start.
The robot is tilted.	The robot is not on the level ground. Please put the robot on the level ground and retry.
The robot is trapped. Please move the robot to a safe area and start it again.	The robot may be stuck or trapped. Please clear obstacles around the robot.
The robot is stuck. Please free the robot	The robot may be stuck or trapped. Please clear obstacles around the robot.
Fan fault.	Please check whether the dust box, filter or dust suction port is blocked by dirt. Please clear the mand then try to turn off and then turn on the system.
Please check whether the radar is blocked or stuck.	The laser distance sensor maybe blocked by obstacles or dust.Please clean the area around and wipe it with a dry cloth.
Please check whether the upper cover of the radar is stuck.	The laser distance sensor may be entangled with trapped dirt. Please clean and retry.

7.2 Frequently Asked Questions

Problems	Solutions
Robot can not be activated.	<p>Make sure the main power switch is in the ON position.</p> <p>Make sure the battery is fully charged.</p> <p>If you still have trouble, turn off the main power switch, wait then turn it back on.</p>
The remote control does not work.	<p>Replace the batteries in the Remote Control. Make sure Robot is turned on and fully charged. The infrared signal cannot be transmitted because the Infrared Emitter on the Remote Control or Robot's Infrared Receiver on Robot is dirty. Use a dry cloth or the Multi-Function Cleaning Tool to wipe the Infrared Emitter on Remote Control and the Infrared Receiver on Robot.</p>
Robot stops working suddenly.	<p>Check if robot is trapped or stuck on an obstacle. Robot will try various ways to get it self out of trouble. If it is unsuccessful manually remove the obstacles and restart.</p> <p>Check if the battery level is too low. If you still have trouble, turn off the main power switch, wait for 3 seconds and then turn it back on.</p>
You cannot schedule cleanings.	<p>Make sure the main power switch on the bottom of Robot is turned on. Make sure the time, time of day (AM/PM), and the scheduled time have been set correctly.</p> <p>Check if Robot's power is too low to start cleaning</p>
Suction power is weak.	<p>Check if any obstructions are blocking the suction inlet.</p> <p>Empty the dust collector.</p> <p>Clean the filters with a vacuum cleaner or a cleaning brush.</p> <p>Check if the filters are wet due to water or other liquid on the floor.</p> <p>Air-dry the filters completely before use.</p>
Robot cannot be charged.	<p>Check if the indicator on the Charging Base lights up. If not, contact the Smart Life service center to repair or replace the Charging Base.</p> <p>Dust off the charging contact pin with a dry cloth.</p> <p>Check if you can hear a beep when Robot is docked onto the Charging Base.</p> <p>If not, contact the Smart Life service center to repair or replace the Charging Base.</p>

Problems	Solutions
Robot cannot return to the Charging Base.	<p>Remove objects within 3 ft/1 m to the left and right side and within 6 ft/2 m of the front of the Charging Base.</p> <p>When Robot is in the vicinity of the Charging Base, it will return more quickly. However, if the Charging Base is located far away, Robot will need more time to return. Please be patient as it works its way back. Clean the charging contact pins.</p>
Robot's movements or travel path are abnormal.	<p>Clean the sensors carefully with a dry cloth.</p> <p>Restart Robot by turning the power switch off and on.</p>
Robot returns to the Charging Base before it Finishes cleaning.	<p>When battery power gets low, Robot automatically switches to Return to Charger Mode and returns to the Charging Base to recharge itself. This is normal.</p> <p>Working time varies according to floor surface, room complexity and the selected Cleaning Mode. This is normal.</p>
The Robot is too noisy	<p>Side brush, entangled,dustbin Filter material blocked, etc. It is recommended to clean and maintain the brush,dustbin and filters regularly.</p> <p>The Robot is in MAX suction power mode.</p> <p>Change the suction power mode to Medium or Low.</p>
Robot cannot connect to a Wi-Fi network.	<p>Make sure your Wi-Fi router supports the 2.4GHz and 802.11b/g/n bands; the 5GHz band is not supported.</p> <p>For details, refer to the "Trouble shooting >Wi-Fi connection" section in this manual.</p> <p>Ensure the Robot is under WiFi signal coverage.</p>
You cannot control Robot with Amazon Alexa.	<p>Check if there are any Internet connection problems. Check whether you have installed the Amazon Alexa app onto your smart device and enabled "Smart Life" Skill in the Amazon Alexa app.</p> <p>For details, refer to the "Use Your Robot with Amazon Alexa/ the Google Assistant" section in this manual. Make sure you have an Smart Life account.</p> <p>Make sure you are using correct Alexa voice-commands.</p>

7.3 Wi-Fi Connection

Before setting up Wi-Fi, make sure the robot and Wi-Fi network meet the following requirements.

Wi-Fi Setup Requirements

Robot:

- Robot is fully charged and robot is turned on.
- Wi-Fi status light slowly flashes blue.


Wi-Fi Network:


- Use the correct password for your network.
- Do not use a VPN (Virtual Private Network) or Proxy Server.
- Your Wi-Fi router supports 802.11b/g/n and IPv4 protocol.
- You are using a 2.4 GHz router or a dual-band router that is configured to support a 2.4GHz frequency band, Robot does not support 5GHz frequency band.
- If robot cannot connect to the Wi-Fi network and you are using a 2.4/5 GHz mixed network switch to a 2.4 GHz network for Wi-Fi setup. You can switch back once your setup is complete.
- When connecting to a hidden network, make sure you enter the connect network name SSID (case sensitive), and connecting to a 2.4 GHz wireless network. When using a network extender/ repeater, make sure the network name (SSID) and password are the same as your primary network.
- The firewall and port settings of your Wi-Fi router allow robot to connect with the Smart Life servers.

Wi-Fi Channels:

- The FCC requires that all wireless devices in the United States operate on the 1-11 wireless spectrum channels.
- Some countries can use spectrum channels higher than channel 11. Refer to your local regulatory agency to determine which channels are accessible.
- A future software release will support access to channels above 11 for users outside North America. Until then, use channels 1-11.

8. Specifications

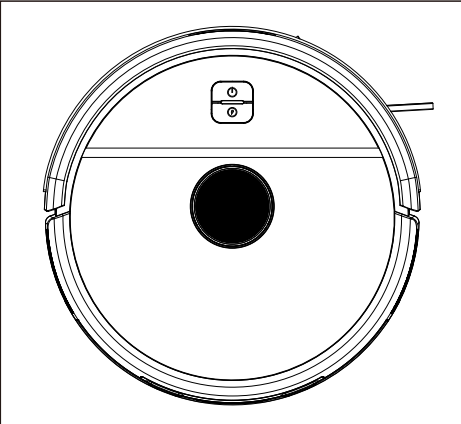	Product Model	MFL01
	Input	19 V \approx 0.6A
	OutPut	19 V \approx 0.6A
	Battery Voltage	14.4 V
	Power Consumption	45W
	Battery Capacity	Li-ion 2400mAh
	Dust Box Capacity	300mL
	Water Tank Capacity	280mL
	Charging Time	< 5H

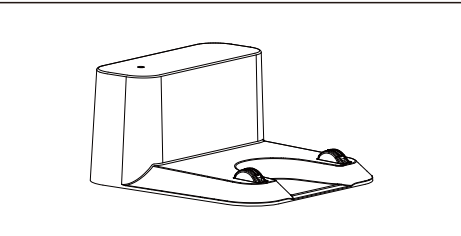	Product Model	MFL01
	Input	19 V \approx 0.6A
	OutPut	19 V \approx 0.6A

9.FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receive is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

10. Supplemental voice prompts and solutions related to the Auto Empty Base

Start dust collection	
Dust collection is complete	
The dust bag seems to be full	Please remove the dust bag from the Auto Empty Base to check if it is full of dust. After reinstalling the new dust bag, it can collect dust normally.
The dust bag is not in place	Please open the dust collection top cover to check if the dust bag is properly installed.
There is a problem with the dust collection	Please check if the Auto Empty Base is powered on, or contact the merchant's customer service.
Dust collection communication failure	Please check whether the robot has good connection with the charging pins of the Auto Empty Base and whether they are in charging state.

本页不印刷

尺寸：A5

材质：128g铜版纸/折页/英语

技术要求：印刷清晰，不得错印，露底，不得有污迹



PANTONE

631 C